

# Adding Compustar RF Remotes to SKSNG Modules

Connection instructions for Compustar RF remote kits to any SKSNG SmartKey Starter®

Written By: Noah Thatcher

## INTRODUCTION

Instructions for connecting and programming Compustar RF remotes to SKSNG SmartKey Starter® module:

SKSNG204D3, SKSNG204D4, SKSNG166D3, SKSNG166D4, SKSNG204D4T, SKSNG166D4T, SKSNG221D3, SKSNG907, SKSNG907RV, SKSNG447D4T

**NOTE: Compustar AM remotes are not supported.**

## Step 1 — Connect RF antenna to SKSNG module



- All SKSNG modules will have a 4-pin blue ports. Connect Compustar RF antenna to corresponding blue 4 pin port on SmartKey Starter® module
- ⓘ Compustar AM remotes and antenna kits are not supported

## Step 2 — Program remotes



- Follow Compustar RF remote programming procedure
  - Cycle ignition from OFF to IGN 5X. Parking lights will flash 1X
  - ☒ If Compustar antenna has a programming button, press the programming button after 5X key cycles
    - Press the lock button on each Compustar remote being programming one at a time
    - Parking lights will flash after each remote is programmed
    - Parking lights will flash 2X when programming is exited
- Test RF remotes