


907SWC Installation Manual

907SWC steering wheel control interface for aftermarket radio installation instructions.

Written By: Noah Thatcher

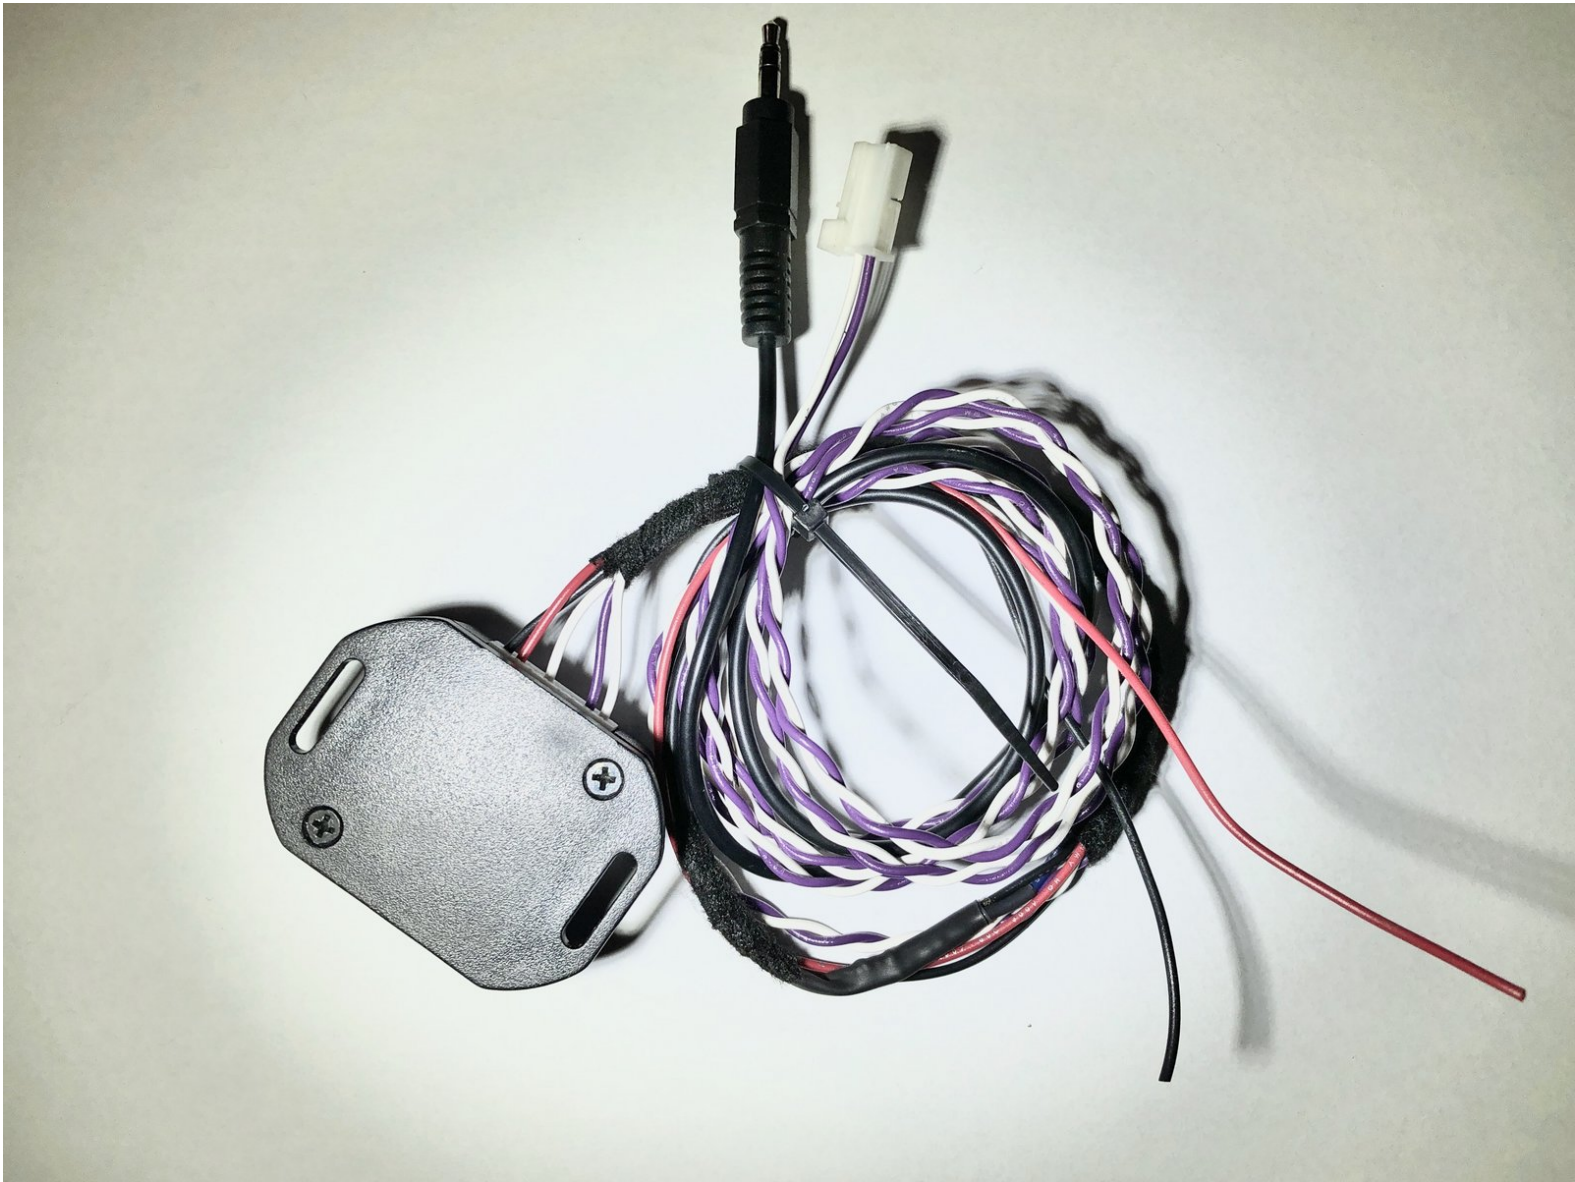

Step 1 — Access fuse box and wiring harness



- Turn both plastic screws in the middle of passenger kick panel (below knee bolster) counter clockwise
- Remove panel and set aside
- Remove screw on door side of plastic floor cover
- Pull back plastic floor cover and remove emergency tool set and set aside
- Fuse box and wiring harness is below emergency kit

Step 2 — Make CAN connections at block



- Locate CAN distribution block below A pillar with purple and purple/white factory wires
- Plug provided 2 pin white plug into any empty spot in the block with purple and purple/white factory wires

Step 3 — Connect power and ground



- Connect red wire from harness to power supply being used for radio (retained accessory)
- Connect black wire to ground source being used for radio (chassis ground)

Step 4 — Radio connection



- Connect interface to radio input. See wiki for radio connection here: [907SWC Radio Connections](#)